9A10168200

TEAC

CD-X6

COMPACT disc DIGITAL AUDIO

CD Receiver

OWNER'S MANUAL

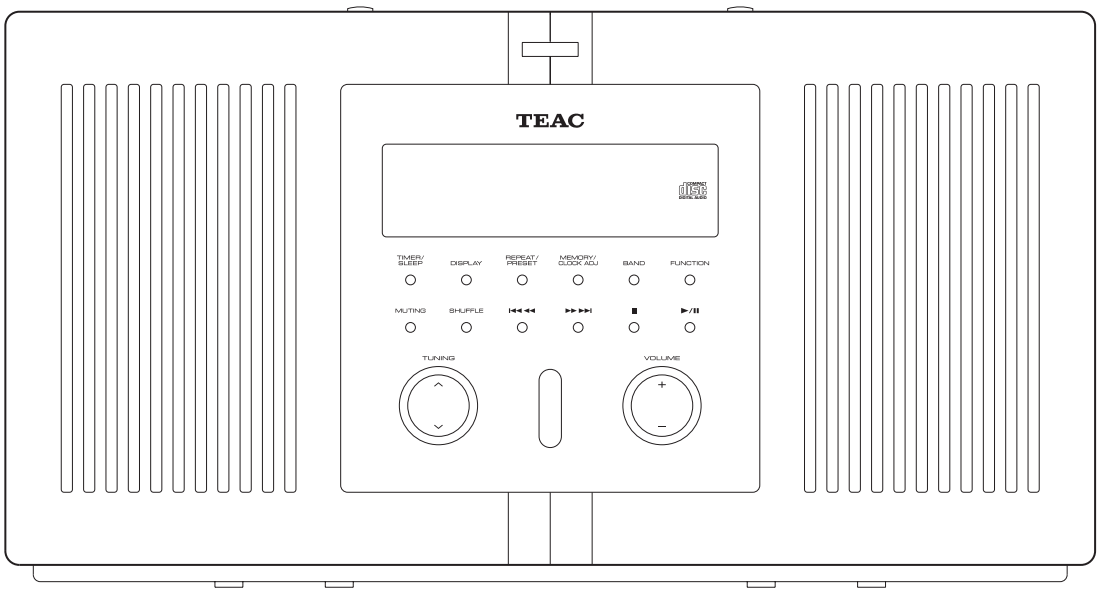

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry cloth.
7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11) Only use attachments/accessories specified by the manufacturer.
12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- Do not expose this apparatus to dripps or splashes.
- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- The apparatus draws nominal non-operating power from the AC outlet with its POWER switch in the off position.

WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

- DO NOT REMOVE THE EXTERNAL CASES OR CABINETS TO EXPOSE THE ELECTRONICS. NO USER SERVICEABLE PARTS ARE WITHIN!

- IF YOU ARE EXPERIENCING PROBLEMS WITH THIS PRODUCT, CONTACT TEAC FOR A SERVICE REFERRAL. DO NOT USE THE PRODUCT UNTIL IT HAS BEEN REPAIRED.

- USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the equipment and/or the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications to this equipments not expressly approved by TEAC CORPORATION for compliance will void the user's warranty.

This product has been designed and manufactured according to FDA regulations "title 21, CFR, chapter 1, subchapter J, based on the Radiation Control for Health and Safety Act of 1968", and is classified as class 1 laser product. There is not hazardous invisible laser radiation during operation because invisible laser radiation emitted inside of this product is completely confined in the protective housings.
The label required in this regulation is shown ①.

① For U.S.A.

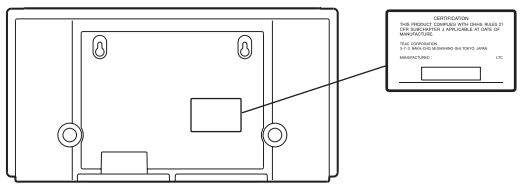

(rear panel of the unit)

Optical pickup :

Type	: CMS-M95BG6
Manufacturer	: SAMSUNG
Laser output	: 0.5mW on the objective lens
Wavelength	: 760 - 800 nm

Contents

Thank you for choosing TEAC. Read this manual carefully to get the best performance from this unit.

IMPORTANT SAFETY INSTRUCTIONS 2
Before Use 4
Compact Disc 5
Remote Control Unit 6
RESET Switch 6
Wall Mounting 7
Use of the Folding Supports 7
Names of Each Control 8

CD

Playing a CD 10
Programmed Playback 12
Repeat Playback 14
Shuffle Playback 14

TUNER

Listening to the Radio 15
How to Preset Stations 16
How to select Preset Stations 17

Sleep Timer 17
Listening the the Extenal Sources 18
Clock Adjustment 19
Timer 20
Troubleshooting 22
Specifications 23

Before Use

Read this before operation

- As the unit may become warm during operation, always leave sufficient space around the unit for ventilation.
- The voltage supplied to the unit should match the voltage as printed on the rear panel. If you are in any doubt regarding this matter, consult an electrician.
- Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- Do not place the unit on any high heat-producing units like your amplifier/receiver.
- Do not use the unit in the hot place (over 85°F/30°C).
- Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the set, contact your dealer or service agency.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank the cord.
- To keep the laser pickup clean, do not touch it, and do not leave the CD compartment open.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
- Keep this manual in a safe place for future reference.

DO NOT MOVE THE UNIT DURING CD PLAYBACK

During playback, the disc rotates at high speed. Do NOT lift or move the unit during playback. Doing so may damage the disc.

WHEN MOVING THIS UNIT

When changing places of installation or packing the unit for moving, be sure to remove the disc. Then, press the power switch to switch the unit back to standby, and disconnect the power cord. Moving this unit with the disc loaded may result in damage to this unit.

CAUTION

The product shall not be exposed to dripping or splashing and that no object filled with liquids, such as vases, shall be placed on the product.m

Do not install this equipment in a confined space such as a book case or similar unit.

Compact Disc

Discs which can be played on this unit:

- Conventional audio CDs bearing the "Compact Disc Digital Audio" logo:

- Properly finalized CD-R and CD-RW discs

Note:

- Depending on the quality of the disc and/or the condition of the recording, some CD-R and CD-RW discs may not be playable.
- Copy-protected discs and other discs which do not conform to the CD standard may not play back correctly in this player.
  If you use such discs in this unit, TEAC Corporation and its subsidiaries cannot be responsible for any consequences or guarantee the quality of reproduction. If you experience problems with such non-standard discs, you should contact the producers of the disc.

- Always place the disc on the disc tray with the label side uppermost. (Compact discs can be played or recorded only on one side.)

- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.

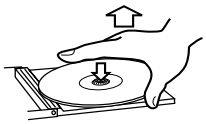

How to remove the disc

How to hold the disc

- Should the disc become dirty, wipe the surface radially with a soft, dry cloth.

- Never use such chemicals as record sprays, antistatic sprays or fluid, benzine or thinner to clean the discs. Such chemicals will do irreparable damage to the disc's plastic surface.

- Discs should be returned to their cases after use to avoid dust and scratches that could cause the laser pickup to "skip."

- Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperatures will warp the disc.

- CD-R/CD-RW discs are more sensitive to the effects of heat and ultraviolet rays than ordinary CDs. It is important that they are not stored in a location where direct sunlight will fall on them, and which is away from sources of heat such as radiators or heat-generating electrical devices.

- Printable CD-R/CD-RW discs aren't recommended, as the label side might be sticky and damage the unit.

- Do not stick papers or protective sheets on the discs and do not use any protective coating spray.

- Use a soft oil-based felt-tipped pen to write the information on the label side. Never use a ball-point or hard-tipped pen, as this may cause damage to the recorded side.

- Never use a stabilizer. Using commercially available CD stabilizers with this unit will damage the mechanisms and cause them to malfunction.

- Do not use irregular shape CDs (octagonal, heart-shape, etc.). CDs of this sort can damage the unit.

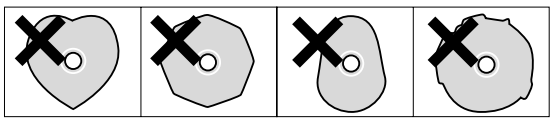

- If you are in any doubt as to the care and handling of a CD-R/CD-RW disc, read the precautions supplied with the disc, or contact the disc manufacturer directly.

Remote Control Unit

The provided Remote Control Unit allows the unit to be operated from a distance.
When operating the remote control unit, point it towards the REMOTE SENSOR on the front panel of the unit.

- Even if the remote control unit is operated within the effective range, remote control operation may be impossible if there are any obstacles between the unit and the remote control.

- If the remote control unit is operated near other appliances which generate infrared rays, or if other remote control devices using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other appliances may operate incorrectly.

Battery Installation

1. **Remove the battery compartment cover.**

2. **Insert two "AAA" (R03, UM-4) dry batteries. Make sure that the batteries are inserted with their positive "⊕" and negative "⊖" poles positioned correctly.**

3. **Close the cover.**

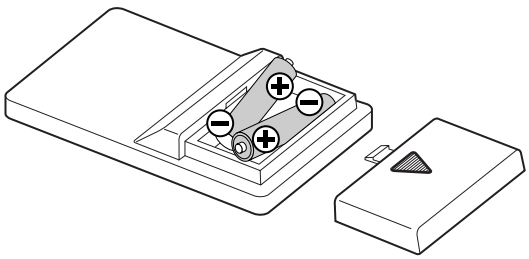

Battery Replacement

If the distance required between the remote control unit and main unit decreases, the batteries are exhausted. In this case replace the batteries with new ones.

Precautions concerning batteries

- Be sure to insert the batteries with correct positive "⊕" and negative "⊖" polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Rechargeable and non-rechargeable batteries can be used. Refer to the precautions on their labels.
- When the remote control unit is not to be used for a long time (more than a month), remove the batteries from the remote control unit to prevent them from leaking. If they leak, wipe away the liquid inside the battery compartment and replace the batteries with new ones.
- Do not heat or disassemble batteries and never dispose of old batteries by throwing them in a fire.

RESET Switch

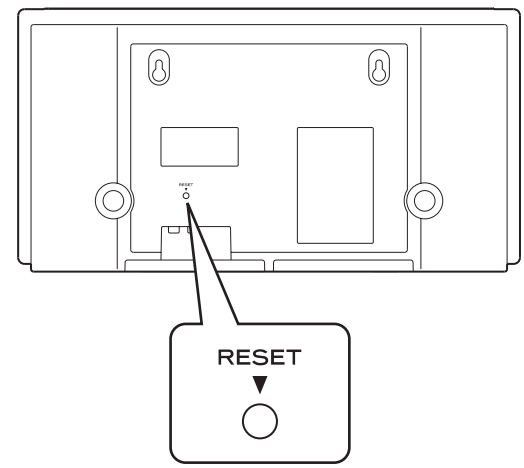

In the following cases, function buttons may not work properly.

- When the system is damaged by some electrical shock.
- When the power is irregular or has electrical noise.

In these cases, press the RESET switch once or twice lightly with a pencil or a ball-point pen when the unit is on.

Wall Mounting

If you want to, you can mount the unit on a wall.

You need to have hooks available that snugly fit into the hanging holes in the back of the unit.

Precaution:

- Be aware of the best possible direction for receiving AM broadcasts (this unit has no AM anntena you can turn around).

1. **Use the supplied guide sheet to mark the exact drilling points on the wall.**
2. **Drill holes in the wall at the marked points.**
3. **Screw your hooks into the wall.**
4. **Using the hanging holes in the back of the unit, carefully hang it onto the hooks.**

Note:

- Ensure that the unit locks onto the hooks and that the hooks are strong enough to support the weight before releasing the hands.

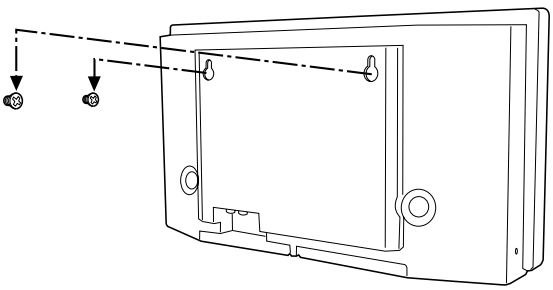

Use of the folding supports

For better stability in using the unit on a table or other flat surface, you can pull out the pair of hinged supports, as shown.

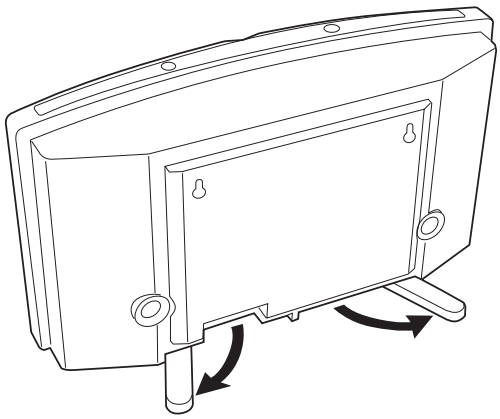

Names of Each Control

TOP

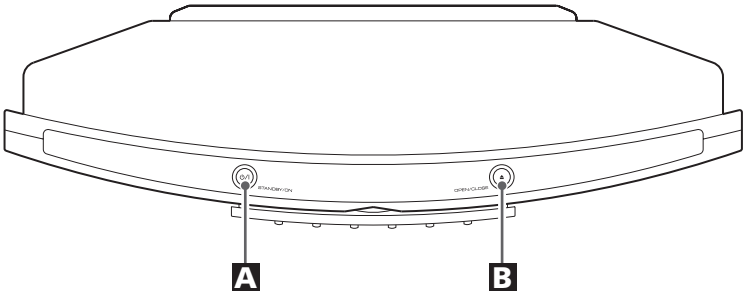

FRONT

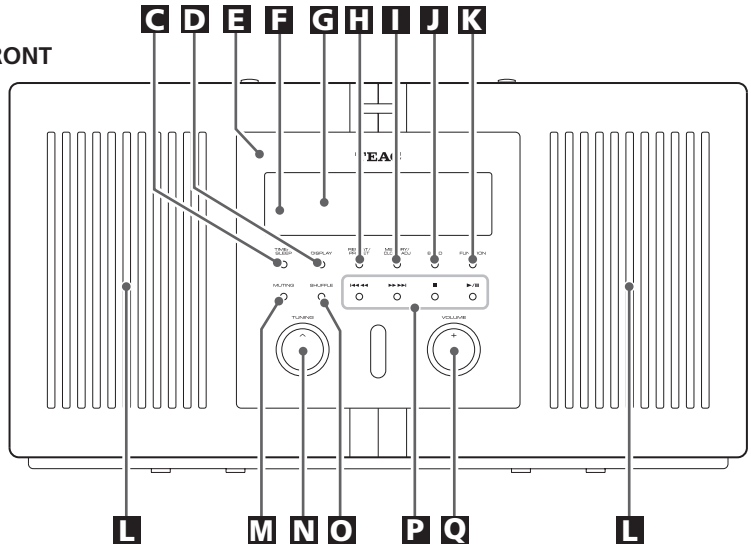

REMOTE CONTROL

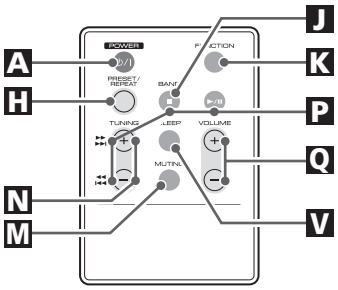

REAR

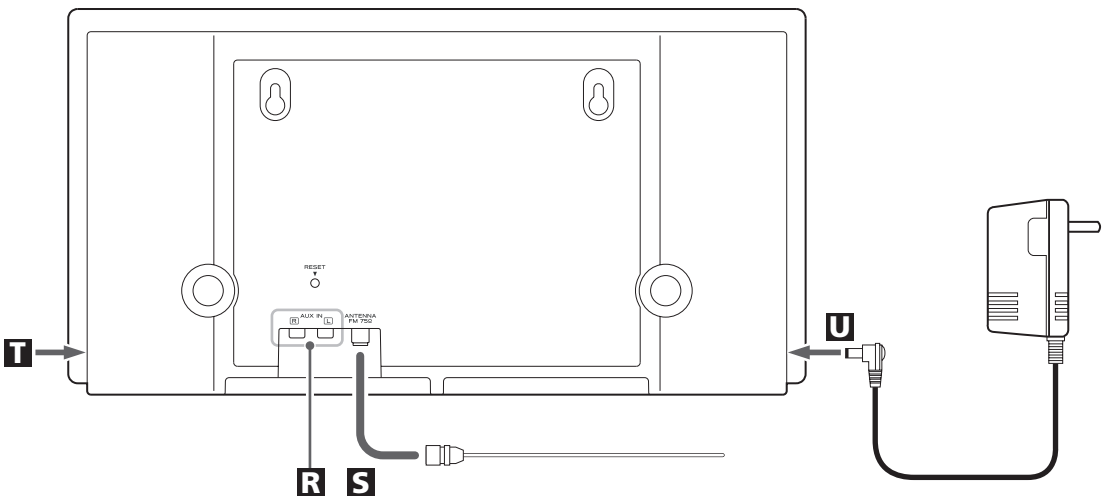

A STANDBY/ON switch

Press this switch to switch the unit between power on and standby.

> The equipment draws nominal nonoperating power from the AC outlet with its STANDBY/ON switch in the STANDBY position.

B OPEN/CLOSE button

Press this button to open and close the CD compartment.

C TIMER/SLEEP button

Use this button to set the timer or sleep timer.

D Display button

Use this button to change the display mode.

E CD compartment

Press the OPEN/CLOSE button on top of the unit to open the CD compartment.

F Remote sensor

G Display

H REPEAT/PRESET button

Use this button to change the repeat mode or select a preset number and station.

I MEMORY/CLOCK ADJ button

Use this button to program tracks or to adjust the clock.

J BAND button

Use this button to select FM or AM.

K FUNCTION button

Press this button to switch between CD, TUNER, and AUX.

L Speakers (stereo)

M MUTING button

Use this button to cut the sound temporarily.

N TUNING button

Use this button to tune in a station.

O SHUFFLE button

Use this button to select shuffle playback mode.

P CD operation buttons

When TUNER is selected, these buttons won't work.

STOP button (■)

Use this button to stop playback.

PLAY/PAUSE button (►/❚❚)

Use this button to start or pause playback.

SKIP/SEARCH buttons (I◄◄ ◄◄/►► ►►I)

Press these buttons to skip tracks.

Hold down these buttons to search for a part of a track.

Q VOLUME button

Use this button to adjust the volume.

R AUX IN jacks

Connect external sources to these jacks.

S FM antenna terminal

Connect lead-type FM antenna to this terminal.

Tune in an FM station and extend the lead to find the best position for the reception. Then fix it to the wall with thumb tacks or the like.

T PHONES

Insert the headphones plug into the PHONES jack, and adjust the volume.

U AC adaptor

First plug the power cord running out the AC adaptor into the DC-IN jack on the left side of the unit, then plug the adaptor into an AC wall socket.

V SLEEP button

Use this button to set the sleep timer.

Playing a CD

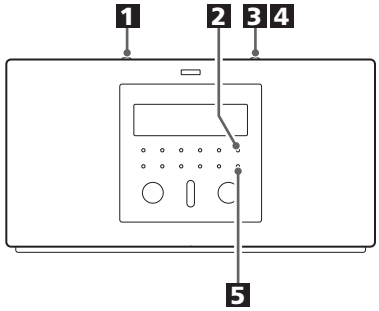

1 Press the STANDBY/ON switch to turn the unit ON.

2 Press the FUNCTION button to select "CD".

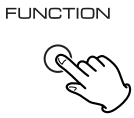

- When no disc is in the unit, "no dISC" will be displayed.

3 Press the OPEN/CLOSE button (⏏) to open the CD compartment.

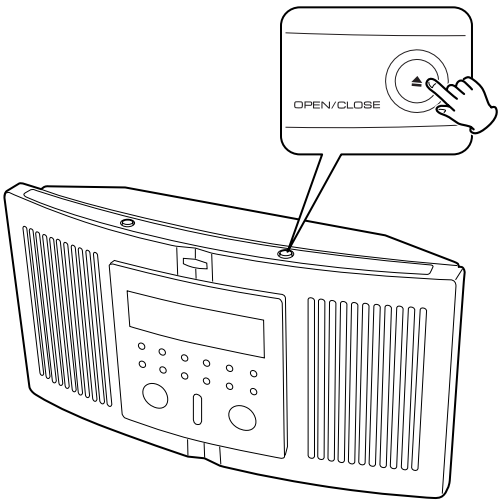

4 Put a disc onto the center spindle in the CD compartment, with the label side facing you, and press the OPEN/CLOSE button to close the CD compartment.

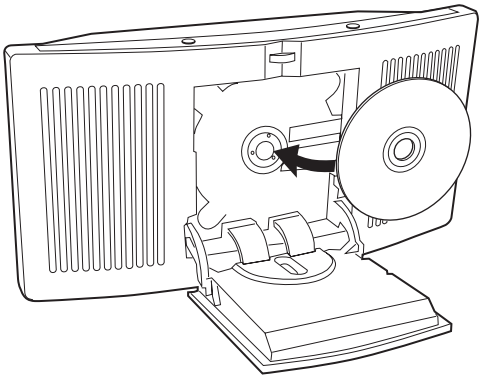

- CD's must be pressed securely onto the Spindle, until a "CLICK" is heard.
- Never place more than one disc in the CD player.
- It takes a few seconds for the unit to read the contents of the disc. No button will work during reading. Wait until the total number of the tracks and total play time of the disc is displayed.

When opening and closing, press the OPEN/CLOSE button (⏏) on top of the unit. Do not force the door by hand during opening and closing operations.

5 Press the PLAY/PAUSE button (►/II) to start playback.

Playback starts from the first track.
When playback of all the tracks has finished, the unit stops automatically.

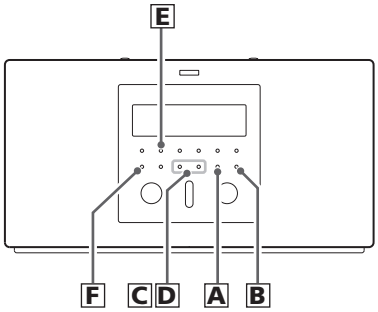

A To stop playback

Press the STOP button (■) to stop playback.

B To suspend playback temporarily (pause mode)

Press the PLAY/PAUSE button (►/❚❚). Playback stops at the current position.

To resume playback, press the PLAY/PAUSE button (►/❚❚) again.

C To skip to the next or a previous track

During playback, press the SKIP/SEARCH button (I◄◄ ◄◄ or ►► ►►I) repeatedly until the desired track is found. The selected track will be played from the beginning.

In the stop mode, press the SKIP/SEARCH button (I◄◄ ◄◄ or ►► ►►I) repeatedly until the desired track is found, and press the PLAY/PAUSE button (►/❚❚) to start playback from the selected track.

- When the I◄◄ ◄◄ button is pressed once during playback, the track being played will be played from the beginning. To return to the beginning of the previous track, press the I◄◄ ◄◄ button twice.
- During programmed playback, the next or previous track in the program is played.

D Search for a part of a track

During playback, hold down the SKIP/SEARCH button (I◄◄ ◄◄ or ►► ►►I) and release it when the part you want to listen to is found.

E DISPLAY button

During playback, press this button repeatedly to change the display mode as follows:

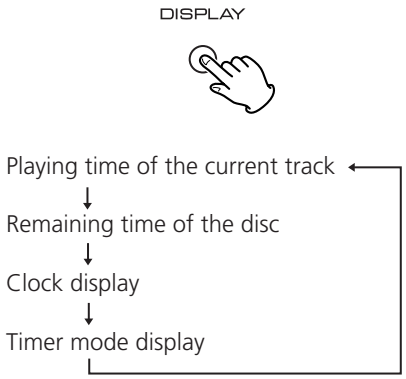

- Clock display and timer mode display appears for 4 seconds and returns to original display.
- Remaining time of the disc cannot be selected in the Stop, Repeat, and Shuffle modes.

F MUTING button

To cut the sound temporarily, press the MUTING button. Press the MUTING button again to restore the sound. If you change the volume during the muting, the muting will be canceled.

Programmed Playback

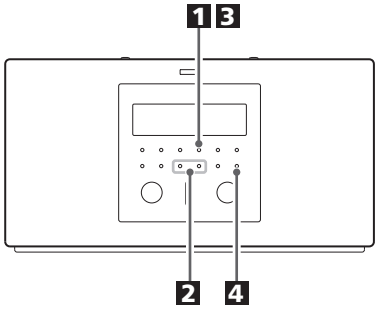

Up to 20 tracks can be programmed in the desired order.

- Shuffle playback does not work during program playback.
- Insert a disc and select "CD" before beginning programming.

1 Press the MEMORY/CLOCK ADJ button in the stop mode.

"MEMORY" indicator blinks, and "P-01" appears on the display.

2 Within 10 seconds, press the SKIP/SEARCH button to select a track.

- If the SKIP/SEARCH button isn't pressed within 10 seconds, program mode will be canceled.

3 While "MEMORY" is blinking on the display, press the MEMORY/CLOCK ADJUST button.

The track is programmed, and "P-02" is displayed.

Repeat step **2** and **3** to program more tracks.

- You can program up to 20 tracks.
- To cancel the program mode, press the STOP button (■).

4 When the selection of track numbers has been finished, press the PLAY/PAUSE button (►/II) to start program playback.

If the PLAY/PAUSE button isn't pressed within 10 seconds, the MEMORY indicator will go off. In that case, press the MEMORY/CLOCK ADJ button and then press the PLAY/PAUSE button to start program playback.

The programmed contents are kept in memory even after switching from CD mode to TUNER or the unit switches from power on to standby.

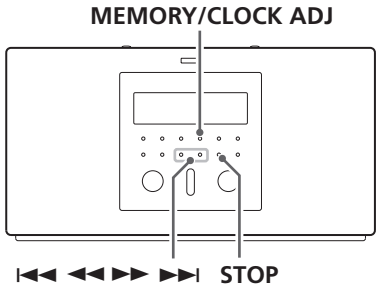

To check the programmed order

In the stop mode, press the MEMORY/CLOCK ADJ button repeatedly to show the track numbers that have been stored in memory.

To add a track to the end of the program

In the stop mode, press the MEMORY/CLOCK ADJ button repeatedly until "00" appears on the display.

Select a track number by pressing the SKIP/SEARCH button, and then press the MEMORY/CLOCK ADJ button.

The track is added to the end of the program.

To overwrite the program

In the stop mode, press the MEMORY/CLOCK ADJ button repeatedly until the track number to be changed appears on the display.

Select a track number by pressing the SKIP/SEARCH button, and then press the MEMORY/CLOCK ADJ button.

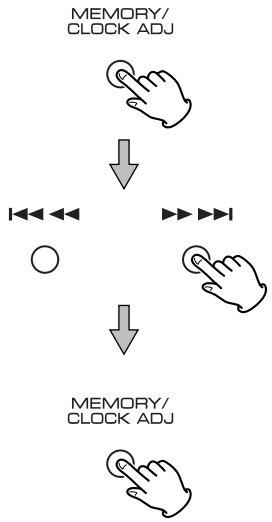

To cancel the program playback mode

Press the STOP (■) button. "MEMORY" indicator disappears, but the programmed contents aren't lost.

To return to the program mode, press the MEMORY/CLOCK ADJ button.

To clear program

In the stop mode, do either of the following to clear the program:

- Press OPEN/CLOSE button (⏏) on top of the unit to open the CD compartment.
- Press the MEMORY/CLOCK ADJ button and then the STOP (■) button.

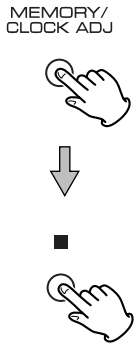

- If the unit is disconnected from the power supply for more than 3 minutes, the programmed contents will be cleared.

Repeat Playback

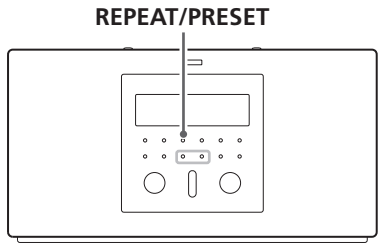

Every time the REPEAT/PRESET button is pressed, the REPEAT indicator lights or blinks, and the mode is changed as follows :

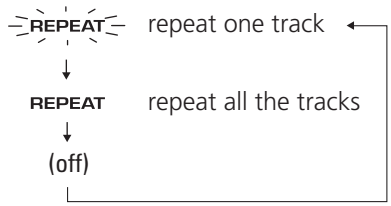

Repeat one track

Press the REPEAT/PRESET button once during playback. The repeat indicator blinks.
The track being played will be played repeatedly. If you press the SKIP/ SEARCH button and select another track, the track you select will be played repeatedly.

It is also possible to select a track to be repeated in the stop mode. Press the REPEAT/PRESET button and then select the track number by pressing the SKIP/SEARCH button. Press the PLAY/PAUSE button to start playback.

Repeat All the Tracks

All the tracks of the disc will be played repeatedly.
Press the REPEAT/PRESET button twice. The repeat indicator lights steadily.

- During program playback, only the programmed tracks will be played in order repeatedly.

- If one of the following buttons is pressed or the CD compartment is opened, repeat mode will be canceled:

  STOP button (■)
  STANDBY/ON switch
  FUNCTION button

Shuffle Playback

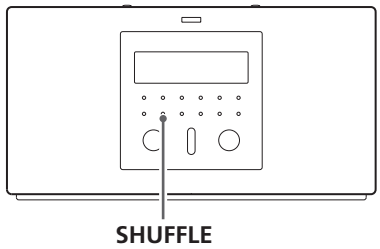

Tracks can be played randomly.

Press the SHUFFLE button in the stop or play mode.

- If you press the SKIP/SEARCH button (►► ►►I) during shuffle playback, next track will be randomly selected and played.
- If you press the SKIP/SEARCH button (I◄◄ ◄◄), the currently played track will be played from the beginning.
- A track cannot be replayed during shuffle playback.
- To stop shuffle playback, press the STOP button (■).
- To cancel the shuffle playback mode, press the SHUFFLE button.
- If one of the following buttons is pressed or the CD compartment is opened, shuffle mode will be canceled:

  STOP button (■)
  STANDBY/ON switch
  FUNCTION button

Listening to the Radio

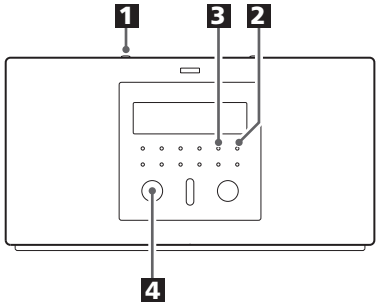

1 Press the STANDBY/ON switch to turn the unit ON.

2 Press the FUNCTION button to select "TUNER".

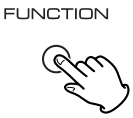

3 Press the BAND button to select FM or AM.

4 Select the station you want to listen to (auto selection).

Press and hold the TUNING button for a second or more to change frequency display continuously.

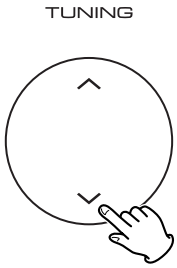

When a station is tuned in, the tuning process will stop automatically.

- Press the TUNING button to stop the auto selection.

Selecting stations which cannot be tuned automatically (manual selection).

Press the TUNING button repeatedly until you find a receivable station.

If the reception is poor

AM broadcast

Turn around the unit to find the best position for AM stations.

FM broadcast

For a good reception, turn around the antenna so that you can get the stations clearly.

- In an area where FM signals are weak, 75-ohm unbalanced-type FM antenna (3 elements or more) is recommended.

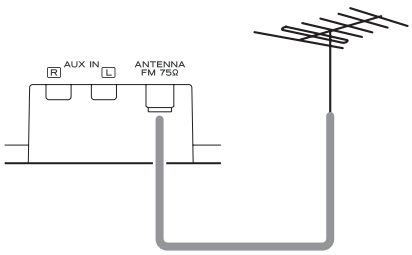

How to Preset Stations

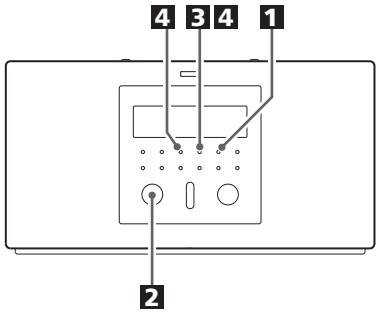

In each band, up to 10 stations can be stored in preset memories.

1 Press the BAND button to select FM or AM.

2 Operate the TUNING button to tune in a station to be stored as a preset station.

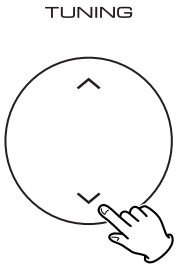

3 Press the MEMORY/CLOCK ADJUST button.

4 Within 10 seconds, select a preset channel to store the station using the REPEAT/PRESET button, and then press the MEMORY/CLOCK ADJUST button.

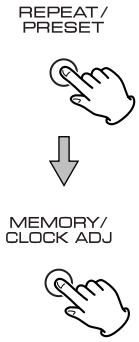

To store more stations, repeat steps **1** to **4**.

How to select Preset Stations

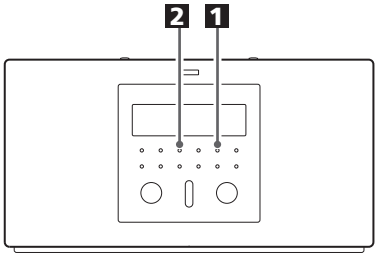

1 Press the BAND button to select FM or AM.

2 Press the REPEAT/PRESET button repeatedly and select a preset channel.

Sleep Timer

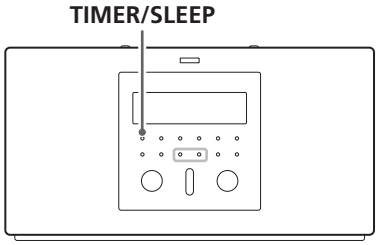

The unit automatically switches from power on to standby at a specified time.

When the power is on, press the TIMER/SLEEP button repeatedly until the desired time appears on the display.
Use the SLEEP button when using the remote control unit.

The sleep time can be changed at 10-minute intervals.

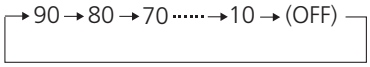

When the sleep timer is activated, "SLEEP" appears on the display.

- To cancel the sleep timer, press the SLEEP button.

Listening to the External Sources

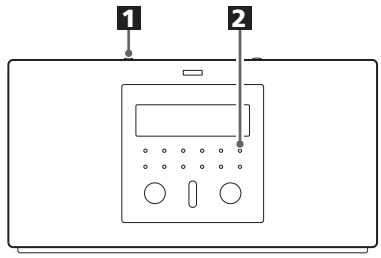

You can connect external sources such as VCR deck or TV to the AUX IN jacks.

1 Press the STANDBY/ON switch to turn the unit ON.

2 Press the FUNCTION button repeatedly to select "AUX".

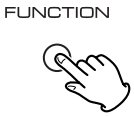

How to connect external sources

- Read instructions of each component you intend to use with this unit.

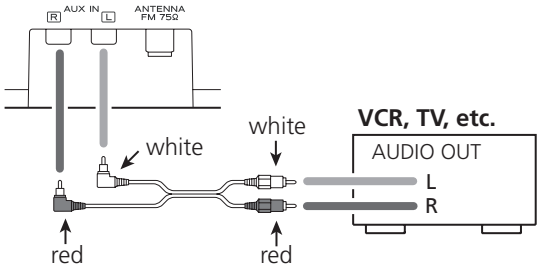

Connect the component with an RCA pin cable.

- Make sure to connect:
  white plug → white jack (L: left channel)
  red plug → red jack (R: right channel)

- Use L-shaped pin plugs for connecting into the AUX IN jacks if you are using the unit on a table or other flat surface.

- Be sure to insert each plug securely. To prevent hum and noise, do not bundle the connection cords with the power cord.

Clock Adjustment

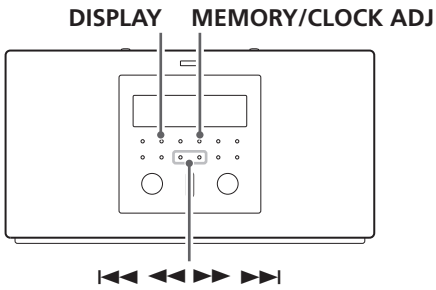

1 Press the DISPLAY button to select clock display.

":" blinks in the clock display.

- If the unit is in standby mode, press and hold the MEMORY/CLOCK ADJUST button for 2 or more seconds, and continue the procedure from step **3**.
- Press the STOP button to cancel the time setting. (In the TUNER mode, press the DISPLAY button.)

2 Within 4 seconds, press and hold the MEMORY/CLOCK ADJUST button for 2 or more seconds.

3 Press the I◄◄ ◄◄ or ►► ►►I button to select "12H" or "24H".

- In the TUNER mode, use the TUNING button.

4 Press the MEMORY/CLOCK ADJUST button.

If you have selected "12H", "AM" or "PM" appears on the display.

5 Press the I◄◄ ◄◄ or ►► ►►I button to set the current hour.

- In the TUNER mode, use the TUNING button.

6 Press the MEMORY/CLOCK ADJUST button.

7 Press the I◄◄ ◄◄ or ►► ►►I button to set the current minute.

- In the TUNER mode, use the TUNING button.

8 Press the MEMORY/CLOCK ADJUST button to finish the time setting mode.

The clock starts from 00 second.

- If the unit is disconnected from the power supply for more than 3 minutes, the clock and timer setting will be reset.
- If the unit is disconnected for less than 3 minutes the time displayed may not be correct.

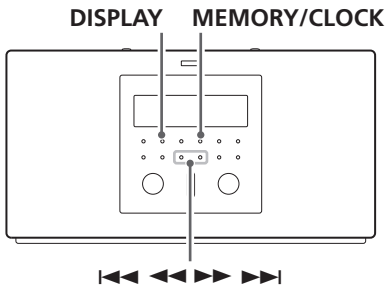

Adjust the clock before setting the timer.

Setting the timer

1 Press the DISPLAY button once or twice to select the timer mode.

The "TIMER" indicator blinks on the display.

2 Within 4 seconds, press and hold the MEMORY/CLOCK ADJUST button for 2 or more seconds.

The "TIMER" and hour blinks on the display.

3 Press the |◄◄ ◄◄ or ►► ►►| button to set the start time (hour).

In the TUNER mode, use the TUNING button.

4 Press the MEMORY/CLOCK ADJUST button.

The minute blinks on the display.

5 Press the |◄◄ ◄◄ or ►► ►►| button to set the start time (minute).

In the TUNER mode, use the TUNING button.

6 Press the MEMORY/CLOCK ADJUST button.

Time setting is finished and blinking of the "TIMER" indicator will stop.

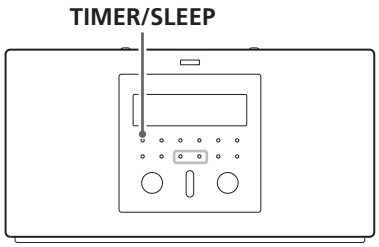

Activating the timer

Press and hold the TIMER/SLEEP button for 2 or more seconds until "TIMER" indicator appears on the display, and press the STANDBY/ON switch to switch the unit back to standby.

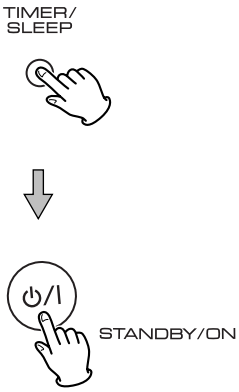

The unit will turn on at the specified time every day, and will return to stanby in one hour from the start time.

For the timer to start playback of a CD, press the FUNCTION button to select CD, insert a disc and adjust the volume before switching the unit from power on to standby.
For the timer to start the radio, press the FUNCTION button to select TUNER, tune in a station and adjust the volume before switching the unit from power on to standby.

Don't forget to switch the unit back to standby, or the timer won't work.

- If you want to switch the unit back to standby anytime within 1 hour from the start time, press the STANDBY/ON switch.
- If the unit is disconnected from the power supply for more than 3 minutes, the clock and timer settings will be reset.

To cancel the timer mode

Press and hold the TIMER/SLEEP button until the "TIMER" indicator disappears from the display.

If you have problems with your system, look through this chart and see if you can solve the problem yourself before calling your dealer or TEAC service center.

General

No power

➔ Check the connection to the AC power supply.

No sound.

➔ Adjust the volume.

➔ If muting is on, press the MUTING button.

The sound is noisy.

➔ The unit is too close to a TV set or similar appliances. Install the unit further from them, or turn them off.

Tuner

Cannot listen to any station, or signal is too weak.

➔ Tune in the station properly.

➔ If a TV is near the unit, turn it off.

➔ Rotate the unit or antenna wire for the best reception position.

CD Player

Cannot play.

➔ Load a disc with label side facing you.

➔ If the disc is dirty, clean the surface of the disc.

➔ Don't use scratched, damaged or warped discs.

➔ Depending on the quality of the disc and/or the condition of the recording, some CD-R/CD-RW discs may not be playable.

➔ Copy-protected discs may not be playable.

Sound skips.

➔ Place the unit on a stable place to avoid vibration and shock.

➔ If the disc is dirty, clean the surface of the disc.

➔ Don't use scratched, damaged or warped discs.

Remote Control Unit

Remote control doesn't work.

➔ If the batteries are dead, change the batteries.

➔ Use remote control unit within the range (5m/15ft) and point at the front panel.

➔ Clear obstacles between the remote control unit and the main unit.

➔ If a fluorescent light is near the unit, put it off.

If normal operation cannot be recovered, unplug the power cord from the outlet and plug it in again. This resets the internal micro-computer which can be disturbed during electrical storms, power interruptions, et cetera.

Beware of condensation

When the unit (or a disc) is moved from a cold to a warm place, or used after a sudden temperature change, there is a danger of condensation; vapor in the air could condense on the internal mechanism, making correct operation impossible. To prevent this, or if this occurs, leave the unit for one or two hours with the power turned on. The unit will stabilize at the temperature of its surroundings.

Maintenance

If the surface of the unit gets dirty, wipe with a soft cloth or use diluted neutral cleaning liquid. Be sure to remove any fluid completely. Do not use thinner, benzine or alcohol as they may damage the surface of the unit.

Specifications

TUNER Section

Frequency Range(FM) . . . . . 87.50 MHz to 108.00 MHz
Frequency Range(AM) . . . . . 520 kHz to 1,710 kHz

CD PLAYER Section

Frequency Response. . . . . 20 Hz to 20 kHz (±1dB)
Wow and Flutter . . . . . Unmeasurable

SPEAKER SYSTEM Section

Type . . . . . 65 mm x 2
Impedance . . . . . 4 ohms

GENERAL

Total Output Power. . . . . 3 W + 3 W
Power Requirement . . . . . 120 V, 60 Hz (via dedicated AC adaptor)
Power Consumption . . . . . 20 W
Dimension (W x H x D): . . . . . 15.4" x 8.2" x 4.6"
(390 x 208 x 118 mm)
Weight . . . . . 6.4 lbs (2.9 kg)

Standard Accessories

AC Adaptor x 1
Remote Control Unit (RC-969) x 1
Battery (AAA, R03, UM-4) x 2
FM Lead-type Antenna x 1
Owner's Manual x 1
Warranty Card x 1
Template for Wall Mounting x 1

- Design and specifications are subject to change without notice.
- Illustrations may differ slightly from production models.

TEAC

TEAC CORPORATION	3-7-3, Nakacho, Musashino-shi, Tokyo 180-8550, Japan Phone: (0422) 52-5081
TEAC AMERICA, INC.	7733 Telegraph Road, Montebello, California 90640 Phone: (323) 726-0303
TEAC CANADA LTD.	5939 Wallace Street, Mississauga, Ontario L4Z 1Z8, Canada Phone: (905) 890-8008
TEAC MEXICO, S.A. De C.V	Campesinos N°184, Colonia Granjas Esmeralda, Delegacion Iztapalapa, CP 09810, México DF Phone: (525) 581-5500
TEAC UK LIMITED	5 Marlin House, Croxley Business Park, Watford, Hertfordshire, WD18 8TE, U.K. Phone: 01923-819699
TEAC EUROPE GmbH	Bahnstrasse 12, 65205 Wiesbaden-Erbenheim, Germany Phone: 0611-71580
TEAC FRANCE S.A.	17, Rue Alexis-de-Tocqueville, CE 005 92182 Antony Cedex, France Phone: (1) 42.37.01.02
TEAC ITALIANA S.p.A.	Via C. Cantù 11, 20092 Cinisello Balsamo, Milano, Italy Phone: 02-66010500
TEAC AUSTRALIA PTY., LTD. A.B.N. 80 005 408 462	280 William Street, Melbourne VIC 3000, Australia Phone: (03) 9672-2400

This appliance has a serial number located on the rear panel. Please record the model number and serial number and retain them for your records.

Model number Serial number

1104·MA-0950A